



Cremonese A-B fix E=15

		L						Nº
argento	430	361,5	15	125	360 - 430	116,5	20	201730¹⁾
	660	556,5	15	190	431 - 660	240,5	20	201731¹⁾
	840	736,5	15	300	661 - 840	190,5	20	201833
	1090	986,5	15	400	841 - 1.090	260,5	20	201834
	1340	1.236,5	15	500	1.091 - 1.340	260,5	10	201835
	1590	1.486,5	15	600	1.341 - 1.590	260,5	10	201836
	1700	1.596,5	15	700	1.591 - 1.700	260,5	10	207302
	1950	1.846,5	15	1.050	1.701 - 1.950	260,5	10	201837
	2200	2.096,5	15	1.050	1.951 - 2.200	260,5	10	201838
	2450	2.346,5	15	1.050	2.201 - 2.450	260,5	10	201839

¹⁾ Per l'avvitamento del frontale usare il fermo per frontale (cod. 213287)

Tabella posizionamento viti

Nº		1	2	3	4	5	6	7	8	9	10	11	12	13	14
201730	1	18,5													
201731	2	18,5	91,5												
201833	3	18,5	91,5	429											
201834	5	18,5	91,5	228,5	474	617									
201835	6	18,5	91,5	328,5	574	685	868,5								
201836	9	18,5	91,5	270	360	428,5	674	830	920	1.119					
207302	9	18,5	91,5	270	360	528,5	774	930	1.020	1.229					
201837	11	18,5	91,5	270	360	550	705	795	863,5	1.124	1.388	1.465			
201838	12	18,5	91,5	270	360	550	705	795	863,5	1.124	1.388	1.465	1.729		
201839	14	18,5	91,5	270	360	550	705	795	863,5	1.124	1.388	1.465	1.685	1.875	1.965

Tabella punti di chiusura


Nº		Z1	Z2	Z3	Z4
201730	0				
201731	0				
201833	1	395			
201834	1	540			
201835	1	640			
201836	2	315	875		
207302	2	315	975		
201837	3	315	750	1.420	




Tabella punti di chiusura

N°		Z1	Z2	Z3	Z4	
201838	3	315	750	1.420		
201839	4	315	750	1.420	1.920	


Disegni tecnici

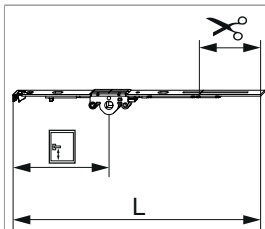


201730

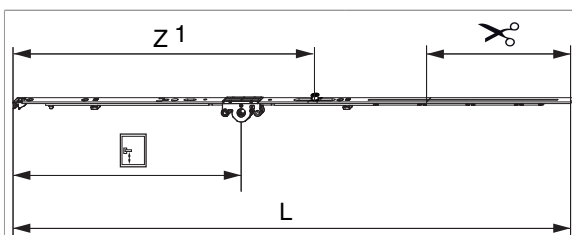


201833

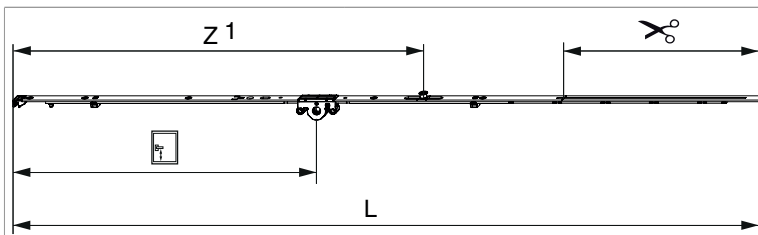


201834

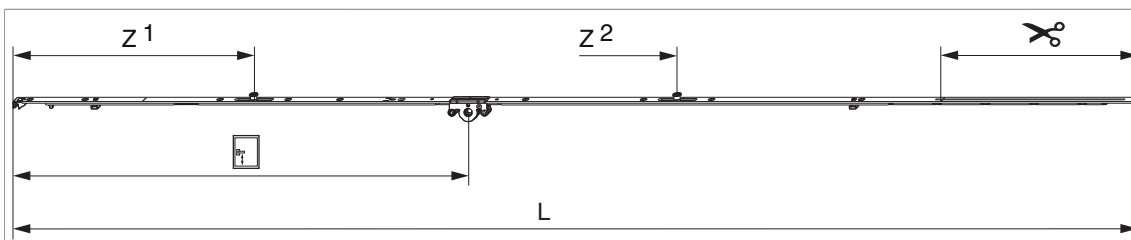

201836

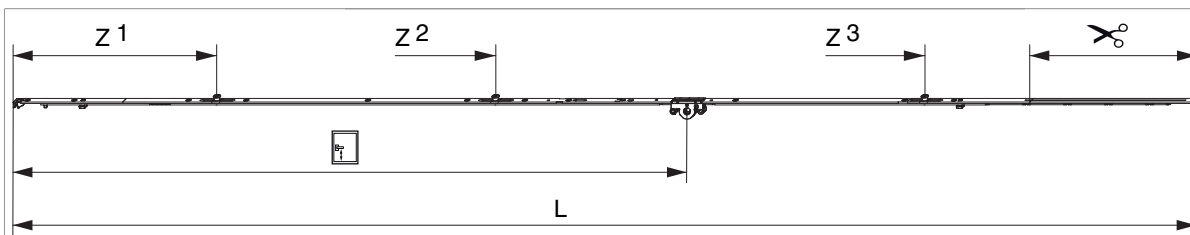

201837

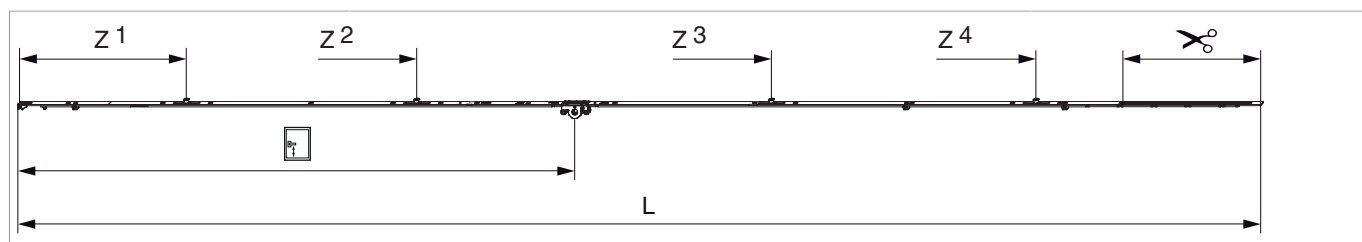

201839